

Chronotherm III

Honeywell

HELPING YOU CONTROL YOUR WORLD

69-0313-3 S.M. 11/89 © Honeywell Inc., 1989

Monitor thermostat operation, read current time and room temperature at a glance.

Check status lights to see if the thermostat is on and saving energy, even in the dark (some models only).

Choose Adaptive Intelligent Recovery™ or conventional recovery using screw on back of thermostat.

Set different schedules for weekdays, Saturday, and Sunday.

Choose manual or automatic operation


Program up to four different time periods in each schedule.



Set the temperature warmer or cooler at the touch of a key.

Bypass the stored program for a single cycle.

Choose system operating mode with the thermostat switches (some models only).

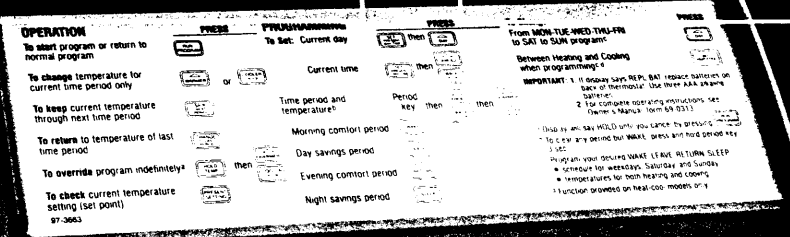


Simple Four-Step Programming

TABLE OF CONTENTS

Adaptive Intelligent Recovery™	1-4	Checking the current temperature setting	29
Recovery Setting	5-6	Maintaining Your Thermostat	31-33
Programming Your Thermostat	7-22	Removing the thermostat	31
Set the current day and time	7	Replacing the thermostat	32
Set the program schedule and heating temperatures	8	Replacing the batteries	33
Set the cooling temperatures, if you have air conditioning	15	Power outages	34
Set the system and fan switches, if your thermostat has them	21	Glossary	35-37
Operating Your Thermostat	23-29	Your Personal Program	39-40
Temporarily changing the program	23	Model Identification Guide	41-42
Permanently changing the program	25	Troubleshooting Guide	43-44
Operating the thermostat manually	26	Typical Questions	45-48
Canceling program settings	27	Typical Energy Savings	49-50
		Quick Reference to the Keys	51-52
		Index	53-54

ADAPTIVE INTELLIGENT RECOVERY™

ADAPTIVE INTELLIGENT
RECOVERY™—BREAK-
THROUGH TECHNOLOGY
SENSES TEMPERATURE
MORE LIKE YOU DO

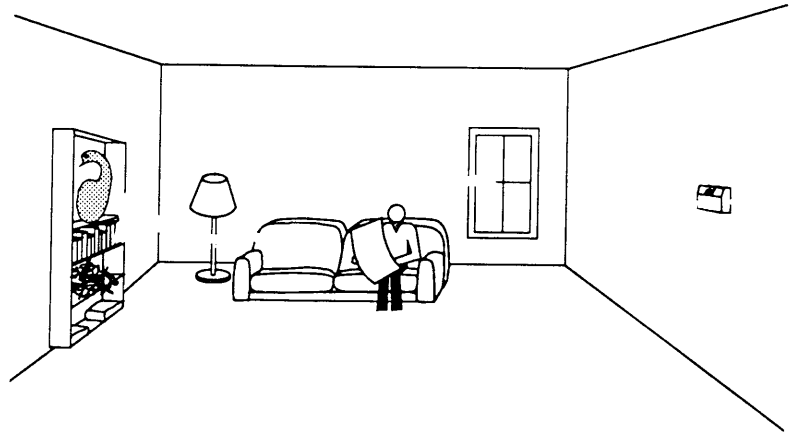


Your new thermostat is so
smart, it's almost human.

- *Your body perceives temperature* from a variety of sources, not only from the air in the room, but also from your surroundings—walls, windows and furnishings.
- *Human beings feel differences* in temperature as slight as two degrees Fahrenheit.
- *Common household thermometers and standard thermostats* sense only air temperature, which may or may not reflect how hot or cold the room actually *feels* to a human being.
- *Your new thermostat* reads the temperature of the wall as well as the air—and responds to temperature changes as little as one degree Fahrenheit—so room temperature is more likely to "feel right" to you and your family.

ADAPTIVE INTELLIGENT
RECOVERY™

ADAPTIVE INTELLIGENT RECOVERY™

THE OPTIMUM COMFORT AND ENERGY SAVINGS SOLUTION

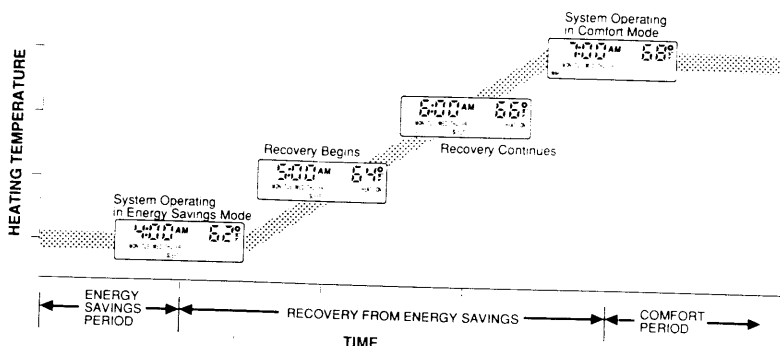

- *This thermostat is actually a small but powerful computer. When calculating the exact time to turn on your furnace or air conditioner, it considers (1) air temperature, (2) the temperature of the wall and (3) when you want the comfort temperature established.*

3

- *During Adaptive Intelligent Recovery™ the thermostat increases the control temperature gradually and turns the equipment on and off several times to save energy by avoiding "overshooting" the comfort temperature. You can see the current control temperature anytime during recovery by pressing the PRESENT SETTING key. On some models, both the SYSTEM and ENERGY SAVING lights may be lit at the same time during recovery.*


- *This "smart" control learns from experience. Each day it checks how closely it "hit the target" and adjusts the recovery start time accordingly.*

It typically takes four to eight days after installation for this thermostat to adjust to the weather, your life style, home construction and heating/cooling system. The thermostat calculates the LEAVE/RETURN recovery separately from the SLEEP/WAKE recovery.

- *With this thermostat you can choose whether you want to use Adaptive Intelligent Recovery™ or conventional recovery. Use Adaptive Intelligent Recovery™ if you want to choose the exact time that the room reaches your comfort temperature. Use conventional recovery if you prefer to choose the exact time your furnace or air conditioner comes on to start recovery.*

4

RECOVERY SETTING

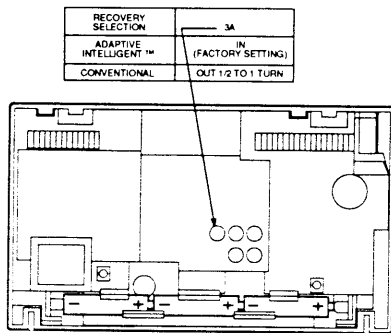


Your thermostat includes a screw on the back marked "3A", allowing for the Adaptive Intelligent Recovery™/conventional recovery choice.

Your thermostat was shipped from the factory with the screw positioned for Adaptive Intelligent Recovery™. Your installer may have left the screw in this position, or may have changed it to conventional recovery. Before programming, you must know for which recovery method your thermostat has been set.

- With Adaptive Intelligent Recovery™, the dwelling will reach the comfort temperature at the exact time you have programmed into the thermostat. See pages 1-4 for detailed explanation of Adaptive Intelligent Recovery™.
- With conventional recovery, the programmed time will mark the start of recovery; therefore, you should program the start time to be earlier than the desired comfort time. It may require some trial and error to arrive at the best starting time, and the best starting time will vary as the seasons change.

5

To determine which type of recovery is set into your thermostat, make sure thermostat is powered with fresh batteries, or is mounted and powered on the wall (see page 32).



Press key. Check thermostat display.



INDICATES THERMOSTAT IS SET FOR CONVENTIONAL RECOVERY

- If the shows in the lower right-hand corner (see illustration), the thermostat is set for conventional recovery. If you would rather have Adaptive Intelligent Recovery™, remove thermostat from wall, turn screw 3A (on back of thermostat) clockwise ↻ until it bottoms. DO NOT OVERTIGHTEN.
- If the does not show, the thermostat is set for Adaptive Intelligent Recovery™. If you would rather have conventional recovery, remove thermostat from wall, turn screw 3A (on back of thermostat) out ↶ 1/2 to 1 turn.

RECOVERY SETTING

6

PROGRAMMING YOUR THERMOSTAT

STEP 1 SET THE CURRENT DAY AND TIME

You can program this thermostat either on the wall or in your hand. SEE PAGE 31 TO FIND OUT HOW TO REMOVE THE THERMOSTAT FROM THE WALL.

Always press the keys with your fingertip or similar blunt tool. Sharp instruments like a pen or pencil point can damage the keyboard.

NOTE: Check the glossary, page 35, for definitions of unfamiliar words.



Press and release. The display shows 1:00 PM Mon.



Press and hold until the current day appears in the display.



Press and hold until the current time appears in the display. Be sure AM or PM appears as desired.



You have programmed the current day and time. Go on to Step 2.

7

IMPORTANT

Before you begin STEP 2, determine if your thermostat is set for Adaptive Intelligent Recovery™ or conventional recovery. See pages 5-6.

If set for Adaptive Intelligent Recovery™, program the times for when you want your home comfortable. The thermostat will decide how early to begin the temperature changes.

If set for conventional recovery, program the times earlier, allowing your home to reach the comfort temperature by the time you get home or wake up. Some trial and error may be required to arrive at the best starting times.

The schedule form on page 39 provides an opportunity to plan your schedule.

STEP 2 SET THE PROGRAM SCHEDULE AND HEATING TEMPERATURES

Start by programming the WAKE time and temperature for weekdays.

The thermostat requires a program for WAKE. You can program LEAVE, RETURN, and SLEEP or not, as you please.



Press and release. Note that the display shows WAKE and the preprogrammed time and temperature.



If you have air conditioning and the display reads COOL, press and release to switch to HEAT.



PROGRAMMING

8

PROGRAMMING YOUR THERMOSTAT

NOTE: The display shows Adaptive Intelligent Recovery™ setting in the following instructions.



If display reads SAT or SUN, press and hold until MON TUE WED THU FRI appears.



Press and hold until the display shows the desired starting time.



Press and hold until the display shows the desired temperature.



If the display starts to blink while you are holding down TEMPERATURE WARMER or COOLER, you have reached the setting limit. If your thermostat can switch automatically between heating and cooling, the heating temperature must be at least 3


degrees below the air conditioning temperature. For example, if the cooling setting is 75°F, the maximum heating setting is 72°F.

9

Program the LEAVE time and temperature, if desired.



Press and release. The display shows LEAVE, but no time or temperature.



NOTE: You can cancel the LEAVE, RETURN, or SLEEP program by holding down the period key until the time and temperature disappear from the display.



Press and hold until the display shows the desired starting time.



Press and hold until the display shows the desired temperature.




10

PROGRAMMING YOUR THERMOSTAT


Program the RETURN time and temperature, if desired.




Press and release. The display shows RETURN, but no time or temperature.



Press and hold until the display shows the desired starting time.



Press and hold until the display shows the desired temperature.



11

Program the SLEEP time and temperature, if desired.




Press and release. The display shows SLEEP and the preprogrammed time and temperature.



Press and hold until the display shows the desired starting time.



Press and hold until the display shows the desired temperature.



12

PROGRAMMING YOUR THERMOSTAT

Set the SATURDAY schedule. Use the same procedure as for weekdays.



Press and hold until SAT appears on the display.



Press WAKE, LEAVE, RETURN, or SLEEP to select the time period.



Use the AHEAD/BACK keys to set the time and the WARMER/COOLER keys to set the temperature.



13

Set the SUNDAY schedule. Use the same procedure as for weekdays.



Press and hold until SUN appears on the display.



Press WAKE, LEAVE, RETURN, or SLEEP to select the time period.




Use the AHEAD/BACK keys to set the time and the WARMER/COOLER keys to set the temperature.




You have completed setting the program schedule and heating temperatures. If you have air conditioning, go to Step 3.

NOTE: Some models will show -AC, indicating the thermostat is operating on backup batteries until the thermostat is mounted on the wallplate and the system is powered.



If you do not have air conditioning, press and release to start the program. Go to Step 4



14

PROGRAMMING YOUR THERMOSTAT

STEP 3 SET THE COOLING TEMPERATURES, IF YOU HAVE AIR CONDITIONING

The program times are the same for both heating and cooling. Only the cooling temperatures need to be programmed if you have already programmed for heating. To set times as you program the cooling temperatures, use the TIME AHEAD and BACK keys as described in Step 2.

First program the WAKE temperature for weekdays.



Press and release. The display shows WAKE and the time and temperature you programmed for heating.



Press and release so COOL shows on the display, along with the preprogrammed cooling temperature.



If display reads SAT or SUN, press and hold until MON TUE WED THU FRI appears.



Press and hold until the display shows the desired temperature. If the display blinks while you hold down TEMPERATURE WARMER or COOLER, you have reached the setting limit. If your thermostat can switch automatically between heating and cooling, the cooling temperature must be at least 3 degrees higher than the corresponding heating temperature. For example, if the heating setting is 70°F, the minimum cooling setting is 73°F.



If you desire a lower cooling setting, the heating setting must first be lowered accordingly.

PROGRAMMING YOUR THERMOSTAT

Program the LEAVE temperature, if desired.



Press and release. The display shows LEAVE, the time programmed for heating, and 78°F.



Press and hold until the display shows the desired temperature.




Program the RETURN temperature, if desired.



Press and release. The display shows RETURN, the time programmed for heating, and 78°F.




Press and hold until the display shows the desired temperature.



17


Program the SLEEP temperature, if desired.



Press and release.



Press and hold until the display shows the desired temperature.



Set the cooling temperatures for the SATURDAY schedule. Use the same procedure as for weekdays.



Press and hold until SAT appears on the display.



Press WAKE, LEAVE, RETURN, or SLEEP to select the time period.



18

PROGRAMMING YOUR THERMOSTAT



Use the WARMER/COOLER keys to set the temperature.

Set the cooling temperatures for the SUNDAY schedule. Use the same procedure as for weekdays.



Press and hold until SUN appears on the display.



Press WAKE, LEAVE, RETURN, or SLEEP to select the time period.



19




Use the WARMER/COOLER keys to set the temperature. You have completed programming the cooling temperatures.

NOTE: Some models will show -AC, indicating the thermostat is operating on backup batteries until the thermostat is mounted on the wallplate and the system is powered.



Press and release to start the program. Go to Step 4.



20


PROGRAMMING YOUR THERMOSTAT

STEP 4 SET THE SYSTEM AND FAN SWITCHES, IF YOUR THERMO- STAT HAS THEM.


Depending on thermostat model, some or all of the switch positions shown may be available to you. Note the positions provided on your thermostat, then set the switch(es) as desired.

First set the fan switch.

FAN ON: The fan runs continuously. Use for improved air circulation during special occasions or for more efficient electronic air cleaning.



FAN AUTO: Normal setting for most homes. The fan goes on and off with the air conditioner in summer. In winter, the fan on most systems starts a few minutes after the furnace comes on. It stops a few minutes after the furnace goes off. The fan starts and stops with the furnace in some electric heat systems.



Then set the system switch.

HEAT: The thermostat controls your heating system.



OFF: Both the heating and cooling systems are off.



COOL: The thermostat controls your air conditioning system.



AUTO: The thermostat controls either your heating or air conditioning system, depending on room temperature.



You have finished programming your thermostat.

Now, while you enjoy precision temperature control, read on to learn about the operating flexibility that makes this thermostat THE SMART CHOICE.

If you removed it from the wall to program, replace it following the procedure on page 32.

OPERATING YOUR THERMOSTAT


TEMPORARILY CHANGING THE PROGRAM

These features let you custom-tailor the program for those times when someone comes home early, or you're staying up late, or you plan to be out for the evening.

To keep the current temperature through the next program period:




Press and release. The name of the period to be skipped will flash in the display until the next regularly scheduled period starts.



To go back to the temperature of the previous program period:



Press and release. The display will show the name of the previous period and flash "temporary" until the next regularly scheduled period starts.



23


To temporarily raise or lower the temperature for the current period only:




Press and hold until the desired temperature is reached. The display will flash "temporary" until the next programmed time period starts.



If you change your mind:



Press and release to cancel any of the temporary settings.



OPERATING YOUR THERMOSTAT

PERMANENTLY CHANGING THE PROGRAM

If your schedule changes or you want a different temperature, you can update any setting without affecting the rest of the program.



Press and release the desired period key.



Press and hold until the desired schedule day shows on the display.



Press and hold the Time or Temperature keys until the display shows the desired new program.



Press and release to return to normal operation.


25

OPERATING THE THERMOSTAT MANUALLY


This feature is particularly useful when you go on vacation or other extended absence. It does not cancel your program.




Press and release.




Press and hold to change the temperature setting. After a few seconds the display will show the current temperature.



Press and release to check the temperature setting.



Press and release to cancel manual control.



NOTE: Moving the system switch also cancels hold.

26


OPERATING YOUR THERMOSTAT

CANCELING PROGRAM SETTINGS


The thermostat requires time and temperature settings in the WAKE period, but any of the others can be canceled. Weekday, Saturday, and Sunday settings are canceled separately.



Press and hold the desired period key until the time and temperature clear from the display (about 3 seconds).




Press and release to return to normal operation.




27

CHECKING THE PROGRAM TIMES AND TEMPERATURES

You can check all the stored settings without affecting the permanent program.




Press and release the desired period key. The start time and temperature setting will appear on the display.



Press and release to display the next daily time and temperature for that period.



Press and release to return to normal operation.



28

OPERATING YOUR THERMOSTAT

CHECKING THE CURRENT TEMPERATURE SETTING

Press a single key to compare current room temperature to the settings at any time.

PRESENT
SETTING

Press and release. The display will show the current temperature setting for several seconds, then revert to the room temperature.




Applicable if thermostat is set for Adaptive Intelligent Recovery™: During recovery from energy savings, the setting displayed will not match the programmed setting. This is because the thermostat gradually changes the temperature setting during recovery to provide most efficient use of the heating or cooling equipment.


MAINTAINING YOUR THERMOSTAT

REMOVING THE THERMOSTAT


1 Loosen the two captive screws at the bottom corners of the case.

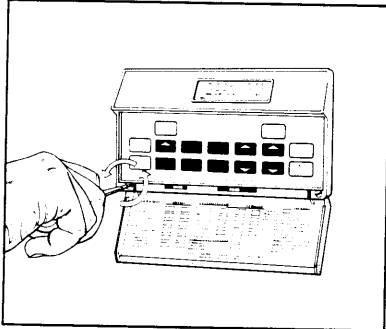

2 Pull the thermostat out from the bottom.

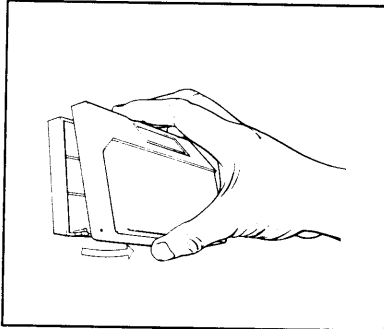


3 Lift the thermostat up and off the base.

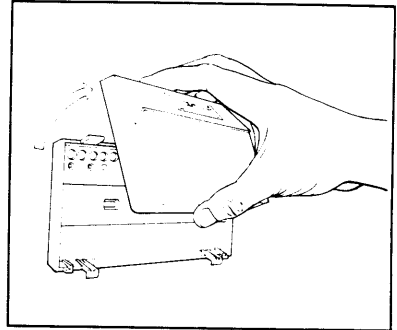


31

REPLACING THE THERMOSTAT


1 Hang the thermostat on the tabs at the top of the base.

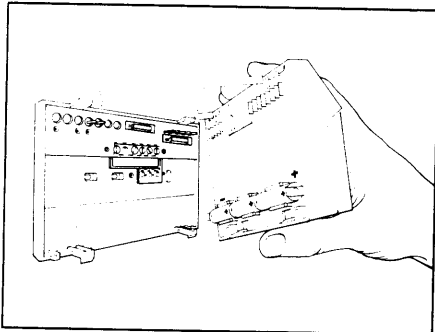

2 Swing down and press on lower edge until thermostat snaps in place.

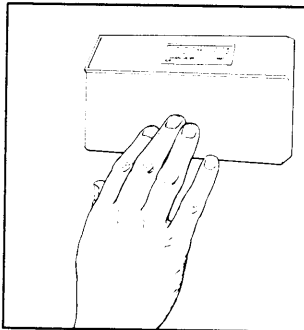

3 Tighten the captive screws.

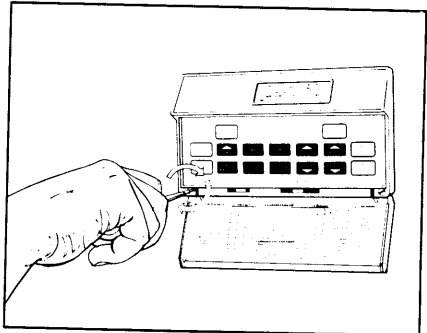


MAINTAINING YOUR THERMOSTAT

REPLACING THE BATTERIES

Your thermostat uses three AA or AAA alkaline batteries, depending on model. See the instructions inside the thermostat door to determine the size. The display will flash "REPL BAT" when the batteries get low. Unless the display is blank (indicating the batteries are dead) when you start, you won't have to reprogram the thermostat if you can insert the new batteries within 20-30 seconds of taking out the old ones.

To replace:

- If your thermostat has a system switch, set it to OFF.
- Remove the thermostat from the wall. See page 31.
- Lift the batteries out of the holder.
- Insert the new batteries, making sure the positive (+) terminals all face toward the right.
- Replace the thermostat on the wall. See page 32.
- Reprogram, if necessary.

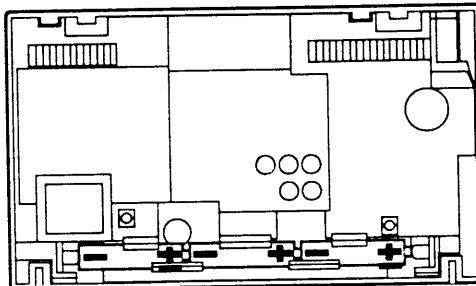

33

POWER OUTAGES

Backup batteries will hold the programming and keep the display on during most power outages. Once the power is restored, the system will resume normal operation.

If the display goes off when power is lost, either the backup batteries need to be replaced or are not installed. When power is restored, the display will flash 1:00 PM to remind you to reprogram.

34

GLOSSARY

Adaptive Intelligent Recovery™

Recovery automatically starts early enough so your house is at the comfort setting by the time you've chosen.

Comfort temperature

The temperature you want in the morning and evening when you're home.

Conventional Recovery

Recovery starts at the time programmed into the thermostat; house reaches comfort temperature shortly thereafter.

Energy-saving temperature

The lower (heating) or higher (cooling) temperature that lets you save on heating and cooling costs when you're asleep or away. Also called the setback (heating) or setup

setback (heating) or setup (cooling) temperature.

Period key

One of the four keys—WAKE, LEAVE, RETURN, or SLEEP—that you press to check or program the start time and temperature for a time period.

Preprogrammed schedule

This is the schedule programmed into your thermostat at the factory. It sets a night program that provides energy savings if you don't set your own program, or if your personal program is lost for any reason. The program, which is the same for all days of the week, is :

Period	Start Time	Temperature	
		Heating	Cooling
WAKE	6:00 AM	70°F	78°F
LEAVE	-----	No program-----	
RETURN	-----	No program-----	
SLEEP	10:00 PM	60°F	78°F

Program

The times and temperatures you set to define the comfort and energy savings periods for each schedule (weekdays, Saturday, Sunday).

Recovery

The time when the thermostat operates the heating or air conditioning equipment to return the house from the energy savings to the comfort temperature. If thermostat is set for Adaptive Intelligent Recovery™, the thermostat starts the recovery period early so the house will be at the comfort setting by the time you've chosen.

Saturday program schedule

The schedule of WAKE, LEAVE, RETURN, and SLEEP period start times and temperatures that you program to run on Saturdays.

Setback

Reducing the temperature in the house for a set period every day in winter for energy savings. The lower temperature is the energy savings temperature.

Set point

The temperature you set on the thermostat. The thermostat turns the heating or cooling equipment on and off to maintain this temperature at the thermostat location until another temperature setting goes into effect.

Setup

Raising the temperature in the house for a set period every day in summer for energy savings. The higher temperature is the energy saving temperature.

Status lights

models that show system operating mode.

ENRG SAV light—This light glows during the LEAVE and SLEEP periods.

SYSTEM light—This light glows whenever the thermostat is calling for heating or air conditioning.

Sunday program schedule

The schedule of WAKE, LEAVE, RETURN, and SLEEP period start times and temperatures that you program to run on Sundays.

GLOSSARY

Time period

One of four program periods; WAKE, LEAVE, RETURN, and SLEEP; available with the thermostat. One period begins when the previous period ends.

WAKE—For conventional recovery, the time the recovery to the comfortable temperature begins; for Adaptive Intelligent Recovery™, the time period when you want the house at a comfortable temperature while the family gets up and gets ready to leave for work or school. This is the only period that must contain a time and temperature.

LEAVE—The time period when you can set back (winter) or up (summer) the temperature for energy savings because the family is usually away from home.

RETURN—For conventional recovery, the time the recovery to the comfortable temperature begins; for Adaptive Intelligent Recovery™, the time period when you want the house at a comfortable temperature for family activities in the evening before bedtime.

SLEEP—The time period when you can set back (winter) or up (summer) the temperature for energy savings because the family is sleeping. Set it to start at your family's normal bedtime.

Often the SLEEP program is set only for the heating season so family members can sleep cool in summer.

Weekday program schedule
The schedule of WAKE, LEAVE, RETURN, and SLEEP period start times and temperatures that you program to run Monday through Friday.

YOUR PERSONAL PROGRAM

You can use the tables below to plan your schedule before you begin programming. If you choose not to program a daytime energy savings period, leave the LEAVE and RETURN periods blank.

Weekday Program

PERIOD	START TIME	HEATING TEMPERATURE	COOLING TEMPERATURE
WAKE	_____	_____	_____
LEAVE	_____	_____	_____
RETURN	_____	_____	_____
SLEEP	_____	_____	_____

Saturday Program

PERIOD	START TIME	HEATING TEMPERATURE	COOLING TEMPERATURE
WAKE	_____	_____	_____
LEAVE	_____	_____	_____
RETURN	_____	_____	_____
SLEEP	_____	_____	_____

39

Sunday Program

PERIOD	START TIME	HEATING TEMPERATURE	COOLING TEMPERATURE
WAKE	_____	_____	_____
LEAVE	_____	_____	_____
RETURN	_____	_____	_____
SLEEP	_____	_____	_____

MODEL IDENTIFICATION GUIDE

HEATING ONLY MODELS


These thermostats have either no switching or HEAT-OFF switching only.

Thermostats with ENRG SAV and SYSTEM lights use three AAA batteries. The batteries hold the program during power outages.


Thermostats without ENRG SAV and SYSTEM lights use three AA batteries. The batteries provide all power to the thermostat.




T8600A/T8601A/T8603A

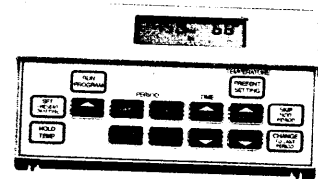

T8602A

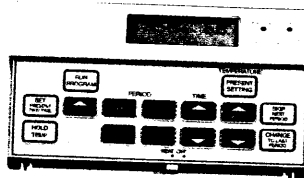

T8600B/T8601B/T8603B

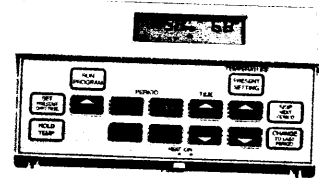


T8602B

41

These thermostats have AUTO-ON fan switching and either HEAT-OFF-COOL or HEAT-OFF-COOL-AUTO system switching.

Thermostats with ENRG SAV and SYSTEM lights use three AAA batteries. The batteries hold the program during power outages.

Thermostats without ENRG SAV and SYSTEM lights use three AA batteries. The batteries provide all power to the thermostat.

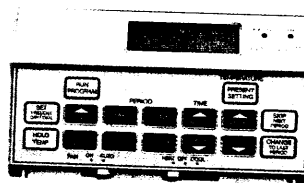


T8600C/T8601C/T8603C



T8602C



T8600D/T8601D/T8603D

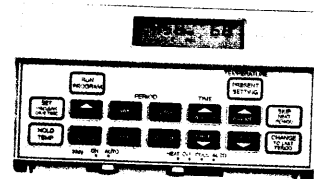

T8602D

MODEL IDENTIFICATION

42

TROUBLESHOOTING GUIDE

IF...

Display will not come on.

THEN...

- Check that heat or cool system power is on. If you use batteries, replace with fresh ones.
- Make sure thermostat is correctly mounted on base.

Display flashes during programming.

- You have reached the temperature setting limit. The setting range is 45°F to 88°F. In models with automatic heat-cool changeover, the COOL temperature setting must be at least 3°F above the HEAT temperature setting.

Display flashes during operation.

- Programming has been lost because of a power outage. You must reprogram.

Program is lost due to power outage.

- Check that backup batteries are installed correctly. Replace if necessary. Reprogram the thermostat.

Temperature change occurs at the wrong times.

- Check the program times for the period in question. Be sure that AM and PM indications are correct. Make sure the current day and time are correct. Reprogram if necessary.
- If using Adaptive Intelligent Recovery™, remember that the furnace or air conditioner comes on before the WAKE and RETURN start times so the house will be at the desired temperature when the period starts.

43

Heating will not come on.

- Check the fuse or circuit breaker and replace or reset if necessary. If display is blank or says REPL BAT, install fresh batteries.
- Check that switch on thermostat is set to HEAT or AUTO.
- If temperature setting is higher than current temperature, and display says HEAT ON, contact your heating and air conditioning contractor.

Cooling will not come on.

- Check the fuse or circuit breaker and replace or reset if necessary. If display is blank or says REPL BAT, install fresh batteries.
- Check that switch on thermostat is set to COOL or AUTO.
- The thermostat has a built-in time delay on cooling to protect the compressor. Allow up to 10 minutes after changing the setting before the air conditioner starts.
- If temperature setting is lower than current temperature, and display says COOL ON, contact your heating and air conditioning contractor.

The house is too warm or too cool.

- Press PRESENT SETTING to check the current temperature setting.
- If desired, change the time or temperature setting. See page 25.

Display says HEAT ON or system light is on, but no heat is coming from the registers.

- Allow time for the furnace to heat up and the fan to come on before checking for heat at the register.

TROUBLESHOOTING

44

TYPICAL QUESTIONS

1. Why do some models of this thermostat have lights?

Battery-operated thermostats do not have indicator lights to conserve battery power. Others may have one or two indicator lights, depending upon the exact model and application.

2. The temperature displayed on the thermostat doesn't always match the room temperature on another thermostat located right next to it. Why?

First, the thermostat is a *very* accurate instrument designed to sense both air temperature and wall temperature, much as your body does. It gives an *average* reading over a period of time. Second, it is self-adjusting, and will take a few days after installation to adapt to your home.

3. Can I control when the furnace comes on in the morning?

When the thermostat is set for Adaptive Intelligent Recovery™, it will turn on the furnace as early as necessary to reach your desired comfort temperature at the programmed time. The earliest it will be is 24 minutes per degree setback ahead of your WAKE time, but it will vary depending on your system, the weather and how much the temperature dropped in your house at night.

If you want to control the start time yourself, just switch the thermostat to conventional recovery following the directions on page 6. This way, the furnace won't come on until your programmed WAKE time, but of course it will take a little while for your house to heat up to the comfort temperature.

45

Remember, whichever way you set your thermostat, if it is so cold outside that your house drops to your sleep temperature, the furnace will turn on and off at night to control the temperature at that setting.

4. What does the HOLD key do?

It bypasses *all* program settings and *holds* the temperature at the present setting. To increase or decrease the temperature while on HOLD, use the WARMER-COOLER keys. Touching RUN PROGRAM will return the device to programmed operations.

5. How long does the HOLD key hold?

Forever! The HOLD button will hold the temperature indefinitely. The only way to release it is to push the RUN PROGRAM button or change the system switch positions if applicable. For a *temporary* temperature change, simply press WARMER or COOLER key. This temporary setting will last until the next scheduled program begins.

6. How can this thermostat save energy when it comes on and off so many times early in the morning hours?

Two ways. First, it *saves* energy (and money) by setting back the temperature for *blocks* of time during the day or night. Second, it *conserves* energy by *recovering gradually* to the desired temperature. This prevents *overshooting* your comfort set point (and wasting energy) or *undershooting* the comfort set point (and forcing you to change the thermostat setting, also wasting energy).

QUESTIONS

46

TYPICAL QUESTIONS

7. My thermostat has ENERGY SAVING and SYSTEM lights. Why do they both go on at the same time? (For example: during the sleep period.)

During Adaptive Intelligent Recovery™, when you recover *gradually* to a next set point, you will stay in the energy-saving mode until the next programmed time is reached. But the system will operate intermittently to *gradually* raise the temperature to your desired comfort level before the time you've set as your WAKE time. You will always be saving energy until the next period's *actual* set point is reached.

8. Why don't all thermostat models have AUTO (automatic) changeover from heating to cooling?

Most parts of the country don't have wide temperature swings during a 24-hour period, so it is not necessary. Desert climates, such as Phoenix, are the exception, because of wide variations in temperature which may require both the air conditioner and furnace to run during different times within a given 24-hour period.

47

9. Sometimes my Chronotherm III Thermostat doesn't allow the house temperature to drop to my SLEEP setting before it starts bringing the furnace on. Why?

When you start your SLEEP period, the thermostat will turn off your furnace and your house temperature will start to fall. After that, the thermostat is out of the picture until the house temperature falls all the way to your SLEEP temperature setting or until recovery starts.





In mild weather or with good insulation, your house temperature may not fall all the way to your SLEEP temperature setting and the thermostat won't turn on your furnace until the time to recover back up to your comfort setting.

48


TYPICAL ENERGY SAVINGS

PERCENTAGE OF HEATING ENERGY YOU CAN SAVE


ONE 10°F ENERGY SAVINGS PERIOD*
70° TO 60° F; 8 HRS./DAY

-  9% TO 11%
-  12% TO 13%
-  14% TO 15%
-  16% TO 18%

TWO 10°F ENERGY SAVINGS PERIODS*
70° TO 60° F; 8 HRS./DAY, 8 HRS./NIGHT



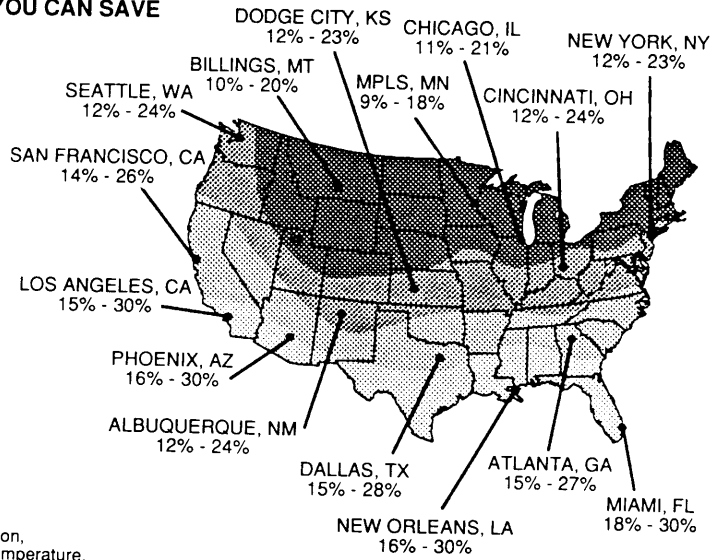

-  18% TO 24%
-  23% TO 25%
-  25% TO 29%
-  UP TO 30%

*Savings for a 5°F, heating setback are at least 1/2 of savings for a 10°F setback. Actual savings depend on your home, geographic location, number of energy saving periods and energy savings temperature. The energy saving period must be at least 2 hours long to save any energy.







PERCENTAGE OF COOLING ENERGY YOU CAN SAVE


ONE 5°F ENERGY SAVINGS PERIOD*
75° TO 80° F; 8 HRS./DAY

-  7% TO 9%
-  10% TO 11%
-  12% TO 14%
-  15% TO 18%

TWO 5°F ENERGY SAVINGS PERIODS*
75° TO 80° F; 9 HRS./DAY, 7 HRS./NIGHT

-  11% TO 15%
-  16% TO 18%
-  19% TO 22%
-  23% TO 33%

*Actual savings depend on your home, geographic location, number of energy saving periods and energy savings temperature. The energy saving period must be at least 2 hours long to save any energy.

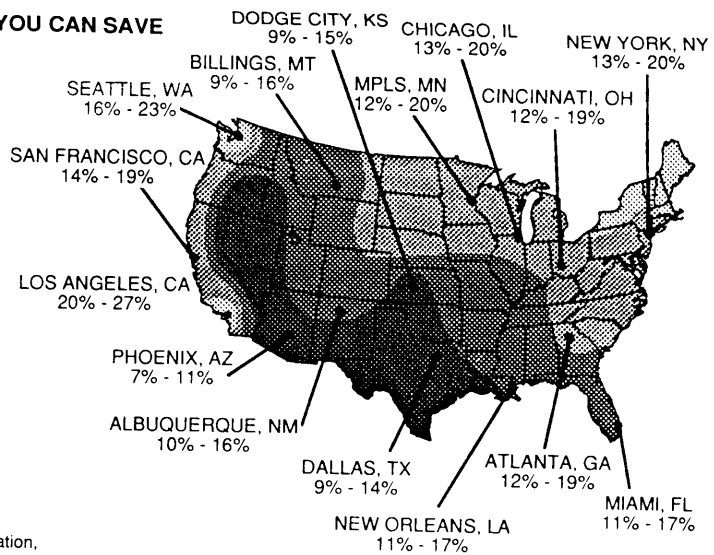

QUICK REFERENCE TO THE KEYS

Press these keys to:



Begin the current day or time programming.



Set the day of the week and select the program day during programming.



Select the time period to program or review. Comfort times depend on selection of Adaptive Intelligent Recovery™ or conventional recovery.



Switch between heat and cool modes during programming or when reviewing the program.



Set the time ahead and back. Hold either key down to change the setting faster.



Set the temperature while programming and temporarily change the temperature during operation. Hold either key down to change the setting faster.



Hold any temperature you desire for an extended period.



Change the temperature to the set point of the previous period.



Maintain the current temperature through the next program period.



Start your programmed schedule, cancel temporary program changes.



See the current temperature setting. Setting may not match programmed setting during recovery from energy savings.

51

REFERENCE TO KEYS

52

INDEX

Adaptive Intelligent Recovery™	1	Energy-saving temperature	35	Operation	23
Automatic Changeover	9, 16	ENRG SAV light	36	Period keys	36
Batteries, replacement	33	Fan switch	21	Personal program	39
Blinking display	43	Features	*	Power outage	34
Canceling programs	27	Flashing display	43	Preprogrammed schedule	36
Change temperature	25	Glossary	35	Present setting	29
Checking present setting	29	Heating temperatures	8	Program schedule	39
Checking programs	28	Hold temperature	26	Programming overview	*
Clock display	*, 7	Identification, model	41	Programming steps	7
Conventional Recovery	5	Keys	51	Quick reference to the keys.....	51
Cooling temperatures	15	LEAVE	37, 51	RETURN	37, 51
Day	7	Lights	*, 36	Removing thermostat	31
Display	*, 7	Maintenance	31	Replacing batteries	33
Energy Savings, Typical	49	Manual operation	26		
		Model descriptions	41		
SLEEP	37, 51	Set program schedule	8	System switch	22
Saturday program	13, 18, 36	Set system switch	22	Table of Contents	i
Set cooling temperatures	15	Setback	36	Temporary program changes	23
Set current day	7	Setting limits	9, 16	Time	7
Set current time	7	Setup	35	Time period	37
Set fan switch	21	Skip	23	Troubleshooting	43
Set heating temperatures	8	Sunday program	14, 19, 36	WAKE	37, 51
		Switch, fan	21	Warranty	58
		Switch, system	22	Weekday program	8, 15, 37
		SYSTEM light	36		

53

*See the product features inside the front cover.


This equipment is a Class B digital apparatus which complies with Canadian Radio Interference Regulations. CRC c. 1374.

FOR MORE ENERGY SAVINGS

SAVE EVEN MORE ENERGY WITH THESE HONEYWELL ACCESSORIES

If you have a standing pilot heating system less than 7-10 years old, you can stay comfortable and save even more. Team your new thermostat with Honeywell Electronic Ignition and an Automatic Vent Damper and save a total of up to 36% on energy costs for your gas furnace or boiler.

- Electronic Ignition ignites the pilot only when necessary to light the furnace.
- Automatic Vent Damper closes to trap useful heat left inside the furnace or boiler after the burner shuts off. The additional heat stays *inside* the house, where it provides useful heat.

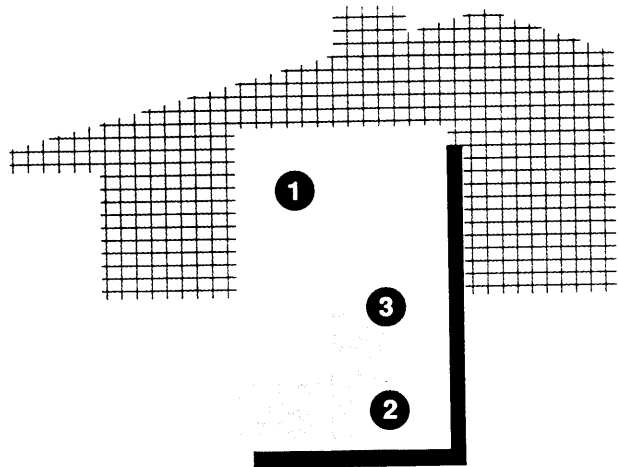


1. CHRONOTHERM III THERMOSTAT
2. ELECTRONIC IGNITION
3. AUTOMATIC VENT DAMPER

55

ELECTRONIC AIR CLEANERS

ENJOY A CLEANER BREATHING ENVIRONMENT PLUS MAINTAIN YOUR SYSTEM'S OPERATING EFFICIENCY WITH A HONEYWELL ELECTRONIC AIR CLEANER

- *Turn your home into a cleaner breathing environment with a Honeywell Electronic Air Cleaner.* It removes up to 95% of airborne, dust, pollen, bacteria, tobacco and cooking particles. It reduces recurring cleaning and redecorating costs, too.
- *Maintain your heating and cooling system's operating efficiency.* Our electronic air cleaner prevents dirty air particles from accumulating on your system's indoor coil.
- *Save 10-25% in operating costs over the life of your equipment because of the cleaner coils.* Honeywell guarantees your indoor coil will maintain optimum efficiency and energy savings for at least 10 years, or we'll pay half the cleaning bill.
- *Add a W8600 Status Panel to monitor air cleaner operation conveniently.* The W8600 is designed to mount next to your Chronotherm III Thermostat or in any convenient, visible area. Its lights tell you when the air cleaner is on, when it's past due for cleaning and if a problem exists with the air cleaner.

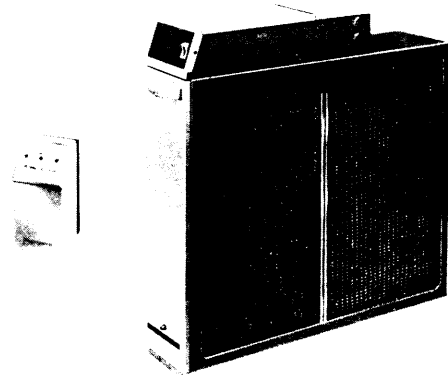

56

LIMITED ONE-YEAR WARRANTY

Honeywell warrants this product, excluding battery, to be free from defects in the workmanship or materials, under normal use and service, for a period of one (1) year from the date of purchase by the consumer. If, at any time during the warranty period, the product is defective or malfunctions, Honeywell shall repair or replace it (at Honeywell's option) within a reasonable period of time.

If the product is defective,

- (i) return it with a bill of sale or other dated proof of purchase, to the dealer or contractor from which you purchased it, or
- (ii) package it carefully, along with proof of purchase (including date of purchase) and a short description of the malfunction, and mail it, postage prepaid, to the following address:
Honeywell Inc.
Return Goods Department
1050 Berkshire Lane
Plymouth, MN 55441-4401

This warranty does not cover removal or reinstallation costs. This warranty shall not apply if it is shown by Honeywell that the defect or malfunction was caused by damage which occurred while the product was in the possession of a consumer.

Honeywell's sole responsibility shall be to repair or replace the product within the terms stated above. HONEYWELL SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE OF ANY KIND, INCLUDING ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING, DIRECTLY OR INDIRECTLY, FROM ANY BREACH OF ANY WARRANTY, EXPRESS OR IMPLIED, OR ANY OTHER FAILURE OF THIS PRODUCT. Some states do not allow the exclusion or limitation of incidental or consequential damages, so this limitation may not apply to you.

THIS WARRANTY IS THE ONLY EXPRESS WARRANTY HONEYWELL MAKES ON THIS PRODUCT. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IS HEREBY LIMITED TO THE ONE YEAR DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

If you have any questions concerning this warranty, please write our Consumer Affairs Department, Honeywell Inc., 1885 Douglas Drive North, Golden Valley, MN 55422-4386 or call toll-free at 1-800-468-1502, Monday-Friday, 7:30 a.m.-4:00 p.m. Central time.

Printed in Taiwan R.O.C.